

STYR- OCH ÖVERVAKNINGSENHET FÖR 2-LEDARSYSTEM CONTROL AND MONITOR UNIT DUAL LINE SYSTEMS

CC1/CCWMon 20 Part Number/Art. Nr: 102061

BRUKSANVISNING USER INSTRUCTIONS



INNEHÅLL

CONTENTS

1. SÄKERHET	sida 2	8. SAFETY	page 19
2. INSTALLATION	sida 3	9. INSTALLATION	page 20
3. KOPPLINGSSCHEMA	sida 4	10. WIRING DIAGRAM	page 21
4. DATA	sida 5	11. DATA	page 22
5. BESKRIVNING	sida 6	12. DESCRIPTION	page 23
6. HANDHAVANDE, STYRNING	sida 7	13. HANDLING, CONTROL	page 24
7. HANDHAVANDE, ÖVERVAKNING	sida 15	14. HANDLING, MONITOR	page 32
15. CE-DOKUMENT	sida 36	15. CE DOCUMENT	page 36

1. SÄKERHET

Symbolförklaring



FARA! Symbolen FARA är avsedd att varna operatörer och underhållspersonal för risker som kan medföra dödsfall, kroppsskada, omedelbar eller långsiktig hälsofara.

Läs instruktionsbok för undvikande av skada.



ELFARA: SPÄNNINGSFÖRANDE KOMPONENTER! Symbolen ELFARA är avsedd att varna operatörer och underhållspersonal för den elfara spänningsförande komponenter utgör.

Läs instruktionsbok för undvikande av skada.

Om utrustningen används på ett sätt som ej är specificerat av tillverkaren, kan produktens inbyggda säkerhet sättas ur spel.



Enheten skall monteras på fast underlag, som normalt ej utsätter enheten för vibrationer. Enheten monteras med tre skruvar med max. ytterdiameter 5 mm, anpassade för materialet de skall fästas i. Enheten hängs först upp på den övre skruven, därefter monteras de två nedre skruvarna enligt bild ovan.

Elinstallation



Elinstallation ska utföras med fast förlagda ledningar och följa gällande lokala och nationella bestämmelser av behörig installatör. Eltillförseln skall kunna brytas med hjälp av en arbetsbrytare (allpolig strömställare) med minst 3 mm kontaktöppning. Kabelförskruvning är anpassad för kabel med ytterdiameter mellan 5 och 10 mm. Rekommenderad kabelarea 1,5 mm². Enheten skall anslutas till skyddsjord.



Säkerställ att enheten är spänningslös innan kåpan öppnas för servicearbeten.

3. KOPPLINGSSCHEMA

Plint	Apparat	Ansl. Plint Under-	Ref.	Beskrivning
L1				Matning
N				80-264 V AC
PE				
3	Maskinstopp			
4				
7	Tryckvakt linje 1			Sluten vid högt tryck.
8				
9	Tryckvakt linje 2			Sluten vid högt tryck.
10				
13	Larm			Öppen vid larm
14				Sluten vid larm
15				Gemensam
16	Driftindikering			Gemensam
17				Sluten vid drift
18				Öppen vid drift
20	Pumpenhet	1, 3, 5		Gemensam 0 V
19		2		Pump
21		6		Linje 1
23		4		Linje 2
5		7		Nivåvakt Öppen vid
6		8		Nivåvakt låg nivå.
35	Tryckgivare linje 1		Blå	4-20 mA
36			Brun	+24 V DC
37	Tryckgivare linje 2		Blå	4-20 mA
38			Brun	+24 V DC

4. DATA

Kapslingsklass	IP 65				
Dimension	231x185x119 mm (BxHxD)				
Vikt	1,3 kg				
Matningsspänning	80-264 V AC - 2 A at 115 V AC – 1 A vid 230 V AC 47-63 Hz				
Säkring primär Säkring sekundär	2 A Trög/250 V AC, Brytförmåga 1 500 A vid 250 V AC 5 A Trög/250 V				
Utgångar	Larmutgång Driftindikering Maxlast per utgång	Potentialfri växlande kontakt Potentialfri växlande kontakt 80 VA resistiv last 100 W induktiv last			
	Magnetventiler	Inbyggd strömkälla 24 V DC Totalt max 4 A			
Inställningsområde	Pumptid	1 – 9 999 sekunder			
	Paustid	1 – 9 999 minuter			
	Tryck	1 – 250 bar			
	Volym	1 – 99 999 cm³			
	Intervall	1 – 99 999 minuter			

5. BESKRIVNING

Styrenheten CC1/CCWMon 20 styr och övervakar 2-ledarfettsmörjningssystem. Styrenheten har inbyggd funktionalitet för att övervaka att rätt mängd doseras till smörjpunkterna. Upp till 20 trådlösa flödesgivare kan anslutas till styrenheten.

FUNKTIONER

STYRNING:

- Inställbar pump och paustid
- Tryckinställning
- Alla inställningar är lösenordsskyddade
- Extrasmörjning
- Manuell drift
- Maskinstyrning
- Driftindikering
- Alarmutgång
 - Larm vid:
 - Utebliven tryckkvittering under pumptiden
 - Låg nivå i fettfat
 - Tryckkvittering från fel linje
 - För högt resttryck
 - Fel på tryckgivare

ÖVERVAKNING

- Inställbar intervalltid
- Inställbar max och min smörjmedelsmängd
- Inställbar maxtemperatur
- Alarmutgång, gemensam med styrenheten
- Larm vid:
 - Avvikande fettmängd
 - För hög temperatur
 - Låg batterinivå
 - Kommunikationsproblem

DEFINITIONER

Linje1, Linje2	De båda ledningarna som växelvis trycksätts i ett 2- ledarsmörjsystem.
Paustid	Tid från pumpstopp till pumpstart.
Tryckdrivningstid	Tiden från pumpstart till dess inställt tryck uppnåtts och pumpen stoppas.
Extra tryckdrivningstid	Inställbar extratid från tryckkvittering till tryckavlastning.
Pumptid	Maximal tryckdrivningstid innan larm utlöses.
Smörjcykel	Tid mellan smörjningarna av varje enskild smörjpunkt, dvs. två tryckdrivningstider och två paustider.
Övervakningsintervall	Den tid som övervakaren mäter utdelad smörjmängd över och jämför med inställda acceptabla värden.
Övervakning	De menyer och funktioner som berör de trådlösa fettmätarna.
Styrning	De menyer och funktioner som berör styrcentralen.

6. HANDHAVANDE STYRNING

För att komma från övervakning till styrning, tryck på **Zesse** i övervakningens huvudmeny.



Starta styrningen genom att trycka start. Knappen blir grön (^{start}) och styrningen är igång. När man startar eller stoppar styrningen så startas eller stoppas övervakningen på samma gång. Om man startar eller stoppar övervakningen så påverkas **inte** styrningen.

Statusindikatorn är normalt gul när styrcentralen är igång men blir grön då pumpen arbetar. Fyrkanten är grå då styrningen är stoppad. Fyrkanten är blå vid manuell drift.

<u>LÖSENORD</u>

För att obehöriga inte ska kunna ändra inställningar och konfigurering är dessa lösenordsskyddade.



Då man försöker att ändra lösenordsskyddade inställningar dyker en login-ruta upp och då korrekt lösenord angivits är enheten upplåst i två minuter.

Vid leverans är lösenordet 1234.



gå tillbaka till föregående meny.

KONFIGURERING





Konfigurationsmenyn här är för både *övervakaren* och *styrningen*. Här ändras:

- Namn.
- Öppen eller sluten extern kontakt då den smorda maskinen är stoppad.
- Anslut USB-minne för att lagra statistik.
- Systeminställningar.
- Språk.
- Lösenord.
- Datum och tid.
- Nollställning av visade högsta och lägsta värde för statistik i övervakaren.

 \times

gå tillbaka till föregående meny.

<u>ÄNDRA NAMN</u>



Ange önskat namn på den smorda utrustningen.

🔀 gå tillbaka till föregående meny.

CE knappen rensar namnfältet.

rensar senaste bokstav, siffra eller mellanslag.

sparar namnet och stänger fönstret.

U-9 och A-T knapparna byter till andra delen av tangentbordet. A-T innehåller bokstäver från A to T. U-9 innehåller övriga bokstäver och alla siffror.

ÄNDRA FUNKTION HOS MASKINSTOPP

Om knappen visar ordet "sluten" så antar styr- och övervakningsenheten att maskinen som ska smörjas är avstängd om maskinstoppsingången är sluten och att den är på om ingången är öppen. Annars tvärtom.

När maskinen är stoppad så gör styrcentralen uppehåll i smörjningen och övervakningscentralen pausar sina övervakningsintervall men fortsätter mäta mängder som tillförs.

<u>USB</u>

Om man har ett USB-minne installerat så sparas information som kan vara användbart för felsökning eller för historisk analys.

- visar att inget USB-minne är installerat.
 Tryck på knappen innan ett USB-minne ansluts.
 visar att styrcentralen är redo för att ta emot ett USB-minne.
 Ändrar sig när minnet anslutits.
 visar att ett USB-minne är installerat.
 - Tryck på knappen **innan** ett USB-minne avlägsnas.
 - visar att ett USB-minne är redo att tas bort.
 - Ändrar sig när minnet avlägsnats.

<u>VÄLJA SPRÅK</u>



Klicka på knappen för att växla mellan:

- SE Svenska
- GB Engelska
- DE Tyska

ÄNDRA LÖSENORD



Man anger sitt nya fyrsiffriga lösenord. Se till att man sparar det på ett säkert ställe.



CE knappen rensar lösenordsfältet.

rensar senaste siffra.

sparar lösenordet och stänger fönstret.

ÄNDRA DATUM OCH TID

TID(HHMM) 0031 7 8 9 4 5 6 0	DATUM	ÅÅMMDD) 000	0113
7 8 9 4 5 6	TIDCHH	MM)		0031
4 5 6 0	7	8	9	
	4	5	6	С

Man kan ange datum och/eller tid. Datum anges med två siffror för året, två för månaden och två för dagen. Tiden anges i tjugofyratimmarsform med fyra siffror.



CE knappen rensar fältet.

rensar senaste siffra.

sparar lösenordet och stänger fönstret.

växla från fältet för datum till fältet för tid.

växla från fältet för tid till fältet för datum.

<u>RESET</u>



Sätter högsta och lägsta registrerade värdet för alla smörjpunkter till senaste värdet. Det visas på statistiksidan av *övervakaren*.

<u>INFO</u>





- 1. Namn på utrustningen
- Informationstext
 Visar om kanalen är maskinstoppad, om det pågår en extrasmörjning eller manuell drift. Om styrcentralen är avstängd visas "Avstängd".
- Smörjstatus Visar pumptid och paustid.
- 4. Pumpindikering

Visar grönt när pumpen går, annars svart.

- Linjeindikering
 Visar grönt då linje 1 är öppen, annars svart.
- Linjeindikering Visar grönt då linje 2 är öppen, annars svart.
- Nivåindikering Visar en blå tunna då det finns fett kvar, visar en röd vid låg nivå.
- 8. Tryckvisning Visar aktuellt tryck
- 9. Inställt tryck Visar inställt kvitteringstryck då linjen är i drift. Visar inställt max resttryck då den andra linjen är i drift.
- 10. Knapp för att stänga fönstret och komma till föregående meny.
- 11. Larmindikering och knapp för att komma till larmlistan Knappen är röd då det finns aktivt larm.
- 12. Knapp för extrasmörjning
- 13. Knapp för manuell drift
- 14. Knapp för att se statistik
- 15. Knapp för att komma till inställningarna
- 16. Knapp för att komma till huvudmenyn

EXTRASMÖRJNING

EXTRA

En komplett extra smörjcykel startas. Knappen är grön då extrasmörjningen pågår.

INSTÄLLNINGAR



PUMPTII PAUSTII TRYCK Extra Extra Extra I Max RE	D: D: PUMPTID PAUSTID MASKINS STTRYCK	1 TOP	61 sec 2 min 00 bar 5 sec 10 sec 5 sec 50 bar	0
7	8	9	4	Ŷ
4	5	6	CE	Ţ
1	2	3	0	H

Ange **pumptid**, **paustid** och **tryck**. Trycket används bara om man använder en tryckgivare. Använder man en tryckvakt så får man ställa in önskat tryck på den.

Extra pumptid är den extra tryckdrivningstiden. Får inte vara 0.

Extra paustid är tiden mellan trycksättningen av de båda linjerna vid extrasmörjning. **Extra maskinstopp** är den extra tiden som smörjningen fortsätter efter att man fått maskinstoppssignal.

Max resttryck är det högsta tillåtna trycket då en ny smörjning startar.

gå tillbaka till föregående meny utan att spara ändringar.

CE knappen rensar lösenordsfältet.



rensar senaste siffra.

sparar inställningarna och stänger fönstret.

flytta markören nedåt.

flytta markören uppåt.

<u>STATISTIK</u>



På denna sida visas antalet utförda smörjningar.

Den övre raden visar det totala antalet smörjningar sedan styrcentralen togs i drift. Den nedre raden visar antalet smörjningar sedan senaste nollställningen. För att nollställa antalet smörjningar på nedre raden, tryck:

MANUELL DRIFT

MAN .



På denna sida kan båda linjerna trycksättas manuellt för att underlätta felsökning mm.

Starta den manuella driften genom att trycka som blir grön (start).

Tryck på knappen 🔟 för att trycksätta respektive linje, knappen ändras till **1**.

Tryck på knappen igen för att avlasta linjen.

Då en linje trycksätts startas pumpen. Pumpen stoppas då inställt tryck uppnåtts och trycket hålls uppe. Skulle trycket sjunka startas pumpen igen.

Avsluta den manuella driften genom att trycka



Vid larm blinker skärmen i rött. Genom att trycka på skärmen visas larmlistan.

Larmlistan visar både larmen från *övervakaren* och *styrning*. De från *övervakaren* har ett litet w före smörjpunktens nummer. För larmen utan w-et så är numret bara ett löpnummer.

Lista på de olika larmtyperna.

LÅG NIVÅ	Visar att det är låg nivå i smörjmedelsfatet.
LÅNG PUMPTID 1	Visar att tryckkvittering ej skett under pumptiden för Linje 1.
LÅNG PUMPTID 2	Visar att tryckkvittering ej skett under pumptiden för Linje 2.
GIVARFEL L1	Visar att tryckgivaren för linje 1 visar ett onormalt högt tryck (över
	250 bar) och antingen är trasig eller att kabeln kortslutits.
GIVARFEL L2	Visar att tryckgivaren för linje 2 visar ett onormalt högt tryck (över
	250 bar) och antingen är trasig eller att kabeln kortslutits.
FEL LINJE	Visar att styrcentralen fått tryckkvittering från fel linje, vilket tyder på att tryckgivarna kopplats in fel.
HÖGT RESTTR 1	Visar att det var för högt resttryck i linje 1 då smörjningen av linje 2 skulle starta.
HÖGT RESTTR 2	Visar att det var för högt resttryck i linje 2 då smörjningen av linje 1 skulle starta.

gå tillbaka till föregående meny.

CE raderar markerad larmhändelse.

- kvitterar markerad larmhändelse.
- ↓ flytta markören nedåt.
- flytta markören uppåt.

7. HANDHAVANDE ÖVERVAKNING

För att komma från *styrning* till *övervakning*, tryck på **r** i *styrningens* huvudmeny.

<u>HUVUDMENY</u>



Starta övervakningen genom att trycka ^{START}. Knappen ändras till [®] och övervakningen är igång.

Smörjpunkternas status:

Siffran i rutan anger smörjpunktens nummer.



Aktuellt fettflöde ligger inom de inställda gränserna



Okvitterat larm.

```
3
```

Kvitterat larm och senaste övervakningsintervalls fettmängd låg utanför inställda gränser.

```
5
```

Maskinstoppad smörjpunkt. I denna övervakare så är alla maskinstoppade eller ingen.



Smörjpunkten är inte installerad. Inställningen VALD = 0.

11

Smörjpunkten är installerad men har inställd volym 0. Smörjmängden övervakas och man får högflödeslarm om det skulle identifieras ett flöde.



Om det finns okvitterade larm så är knappen för larmlistan röd, annars är den grå.



Batteriets laddning är så låg att det är dags att byta batteri. Färgerna på den följer ovan regler.

INFORMATION

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20

#1 PUMF	372E		X
NU	0.0	cm ³ / 1.3	min
SIST	0.0	cm ³ /1200.0	min
INST	20.0	cm ³ /1200.0	min
DENNA V	ECKA	0.0 cm ³	hiht
SUBTOTA	L	0.0 cm ³	\sim
TEMPERA	TUR	20 °C	aa
BATTERI		3.6 V	22

Information om den smörjpunkt man valt.

Förklaring:



Visar vilken mängd som hittills har erhållits under det pågående intervallet och hur lång tid som förflutit av det pågående övervakningsintervallet.

5151 U.U CM 7 5.U MIN	SIST	0.0 cm ³ /	5.0 min
-----------------------	------	-----------------------	---------

Visar mängden under föregående intervall och intervalltiden.

INST	10.0 cm ³ /	5.0	min
Vicar dan ing	ställda mängdon och intorva	lltidan	

Visar den inställda mängden och intervalltiden.

DENNA VECKA 0.0 CП

Visar mängden som hittills har tillförts smörjpunkten de senaste sju dagarna.

FORRA VECKA 0.0 c m

Visar mängden som tillfördes smörjpunkten de sju dagarna innan de senaste sju.

0.0 cm³ SUBTOTAL

Visar mängden som har tillförts smörjpunkten sedan det nollställbara räkneverket nollställdes.

. 8

5

TOTALT

44 Visar mängden som har tillförts smörjpunkten sedan systemet sattes i drift.

3

TEMPERATUR

Visar aktuell temperatur hos flödesgivaren.

BATTERI

Visar aktuell batterispänning hos flödesgivaren. Enheten larmar då spänningen blir för låg. Batterilivslängden överstiger 10 år.

Cm³



🔀 gå tillbaka till föregående meny.

Statistiköverblick över alla smörjpunkterna.

Trenden för vald smörjpunkt.

Använd pilknapparna för att visa information om föregående/nästa smörjpunkt.

INSTÄLLNINGAR

	#3 LA	GER QT3	29		X	#3 LAC	GER QT3	29		X
8	VALD (Volym Interva	170) CM ³ AL MIN	1 7.5 5.0		\gg	MAX TEN Kalf CN Subtot	1P °C 1 ³ / PLS CM ³	70.0 0.325 60.1		
	MAX VOI MIN VOI	L CM ³ L CM ³	15.0 5.0	CE	0	ID SER. #		0	CE	0
	7	8	9	4	仓	7	8	9	4	Ŷ
	4	5	6		Ŷ	4	5	6	•	Ŷ
	1	2	3	0		1	2	3	0	H

Man gör inställningar för varje individuell smörjpunkt. Går man ned till ID får man namnge smörjpunkten.

VALD (1/0)

Om smörjpunkten ska vara på eller av. 1 = på och 0 = av.

VOLYM CM3 7.5

Den smörjmängd man vill smörjpunkten ska få under övervakningsintervallet. Sätts den till noll så övervakas smörjpunkten bara så den larmar om det kommer smörjmedel.

INTERVAL MIN 5.0

Övervakningsintervallet i minuter. Bör helst vara flera gånger större än smörjintervallet för stabilitet, men behovet av snabba larm om smörjningen har stannat kan tvinga ned tiden.

MAX VOL CM³ 15.0 Min Vol CM³ 5.0

Övre och undre gräns för när övervakningscentralen ska larma. Övre gränsen larmas för så snart den går över. Undre gräns när övervakningsintervallet avslutas.

MAX TEMP °C 70.0

Gränsen för när fettmätaren varnar för att temperaturen är för hög. Om mätaren utsätts för för höga temperaturen kan elektronik och annat skadas.

KALF CM³/PLS 0.325

Kalibreringsfaktorn för fettmätaren. Bör inte ändras normalt.

SUBTOT CM³ 60.1

Här nollställer man subtotalen genom att sätta den till noll.

🔀 gå tillbaka till föregående meny.

CE knappen rensar lösenordsfältet.

- rensar senaste siffra.
- sparar inställningarna och stänger fönstret.
- 🕂 flytta markören nedåt.
- flytta markören uppåt.

gå till inställningarna för föregående/nästa smörjpunkt och radera ändringar.

Tryck wei och därefter för att de nya inställningarna ska börja gälla omedelbart, annars gäller de nya inställningarna först under nästa intervall.

<u>STATISTIK</u>





Här ska man få en snabb och bra överblick över smörjpunkterna.

- Status.

Grön Bra.

Blå Maskinstoppad.

Gul Senaste värde utanför larmgränser. Larm kvitterat.

Röd Okvitterat larm.

- Lägsta och högsta värde sedan senaste nollställning.

Nollställningen nås genom att trycka 💟 (kommer till *övervakarens* huvudmeny), sedan 🚈 (kommer till *styrningens* huvudmeny), följt av 🚾 och till sist 🔤. Värdet på senaste avslutade övervakningsintervall.

 Vardet på senaste avslutade overvakningsintervall.
 Stapeln är skalad enligt övre och undre larmgräns. Så om inte övre och undre larmgräns är satt till samma så bör man inte jämföra staplarna med varandra.

🔀 gå tillbaka till föregående meny.

<u>TREND</u>





Visar mängden för de senaste intervallerna i förhållande till max- och mingränserna. Äldre åt vänster och nyare åt höger.



Declaration of Icons



DANGER! The icon DANGER shows users and maintenance personnel that there are dangers that can lead to death, bodily harm, immediate and lasting damage.

Read manual to avoid dangers of damage.



ELECTRICAL HAZARD: RISK OF ELECTRIC SHOCK! The icon ELECTRICAL HAZARD warns users and maintenance personnel of the electrical high voltage parts. Read manual to avoid dangers of damage.

If the equipment is used in a way that is not specified by the manufacturer, the safety of the product may be decreased.



The unit is best mounted on a steady surface which usually don't vibrate. The unit is mounted by three screws with a max. diameter of 5 mm (1/5''), suitable for the material they're supposed to be used in. The unit is hanged on the top screw, then is fastened by the two other screws as seen on above illustration.

Electrical installation



Electrical installation must be done by a qualified electrician. The wiring must be of a sufficient quality and according to local and national laws. Power supply must have a breaker (min. 3 mm gap). Cable gland is for cables of 5 mm and 10 mm. Preferred cable area is 1.5 mm². The unit must be connected to protective earth.



Make sure that the power to the unit is off before removing the cover.

10. WIRING DIAGRAM

Cabinet	Connecting point		Remark	
Term.no.	Apparatus	Con. point	Ref.	
L1	Central group			Power supply
N				80-264 V AC
PE				
3	Machine stop			
4				
7	Pressure switch line 1			Closed at high pressure
8				
9	Pressure switch line 2			Closed at high pressure
10				
13	Alarm			Open at alarm
14				Closed at alarm
15				Common
16	Operation			Common
17				Closed at running
18				Open at running
20	Pump unit	1, 3, 5		Common 0 V
19		2		Pump
21		6		Line 1
23		4		Line 2
5		7		Level switch
6		8		Level switch
35	Pressure transducer line 1		Blue	4-20 mA
36			Brown	+24 V DC
37	Pressure transducer line 2		Blue	4-20 mA
38			Brown	+24 V DC

11. DATA

IP 65			
231x185x119 mm (WxHxD)			
1.3 kg			
80-264 V AC - 2 A at 11	5 VAC – 1 A at 230 V AC		
47-63 Hz			
2 A slow/250 V AC, bre	ak 1 500 A at 250 V AC		
5 A slow/250 V			
Max load	80 VA resistive load		
	100 W inductive load		
Alarm output	Voltage-free change over contact		
Running output	Voltage-free change over contact		
Solenoid valve	Built-in power source 24 V DC Total max. 4 A		
Pump time	1 – 9.999 seconds		
Pause time	1 – 9.999 minutes		
Pressure	1 – 250 bar		
Monitoring interval	1 – 99,999 minutes		
Grease amount	1 – 99,999 cm ³		
	IP 65 231x185x119 mm (Wx 1.3 kg 80-264 V AC - 2 A at 11 47-63 Hz 2 A slow/250 V AC, bre 5 A slow/250 V Max load Alarm output Running output Solenoid valve Pump time Pause time Pressure Monitoring interval Grease amount		

12. DESCRIPTION

The central control unit CC1/CCWMon 20 Compact controls and monitors dual line grease lubrication systems. It can monitor up to 20 Wireless LubeMon grease meters.

FUNCTIONS

CONTROL

- Settable pump and pause periods.
- Pressure settings.
- All settings are password-protected.
- Optional extra lubrication.
- Optional manual operation.
- Control via the lubricated machine.
- Output for operation indicator.
- Output for alarms (same as for monitor) when:
 - the pump period reached without target pressure achieved
 - the level in the drum of lubricant is too low
 - there is a short circuit in the pressure transducer
 - there is a pressure acknowledgement from the wrong line
 - there is too high rest pressure.

MONITOR

- Settable interval
- Settable maximum and minimum allowed lubrication amount
- Settable maximum temperature
- Output for alarms (same as for control) when:
 - the lubrication amount is outside of set parameters
 - the temperature is too high
 - the battery charge is too low
 - the communication to the grease meters have problems

DEFINITIONS

Line1, Line2	The two lines that are alternately pressurized in a dual line lubrication system.
Pause time	The time from pump stop to pump start.
Pressure operating time	The time from pump start until its set pressure is achieved and the pump is stopped.
Extra pressure operating time	Settable extra time from pressure acknowledgement to depressurization.
Pump time	Maximum pressure operating period before an alarm is issued.
Lubrication cycle	The time between lubrications of every individual lubrication point, i.e. two pressure operating periods and two pause periods.
Monitoring interval	The time period for which the unit measures the lubrication.
Monitor	The menus and functions concerning the wireless grease meters.
Control	The menus and functions concerning the control of the dual-line system.

13. HANDLING CONTROL UNIT

To move from *Monitor* to *Control*, press **Control** on the *Monitor* main menu.



Start the control unit by pressing **START**. The button becomes green (**START**) when the control unit is running.

The status indicator is grey when shut off; yellow when on but not lubricating; green while lubricating; blue when in manual control.

PASSWORD

To make it hard for any unauthorized person to change the settings and configuration, they are password-protected.



If anyone try to change the password-protected data a login screen will appear and when correct password is entered the unit is unlocked for two minutes.

At delivery, the password is 1234

move back to previous menu.

CONFIGURATION





Configuration for both the *Monitor* and the *Control* is done here. From here you can:

- Change name.
- Configure if closed or open external contact when machine is stopped.
- Connect a USB memory for storage of statistical information.
- System settings.
- Set language.
- Change password (4-digit pin code).
- Set date and/or time.
- Reset the lowest and highest value in statistics view in *Monitor*.

move back to previous menu.

0	PUMP S	YSTEM		X
CE	+			U - 9
A	В	С	D	E
F	G	Н	Ι	J
К	L	М	Ν	0
Ρ	۵	R	S	Т

Most of the buttons on these menus are for entering letters, numbers or spaces. move back to previous menu.

The CE button clears the name field.

clear the last letter, number or space.

set the name and close the menu.

The U-9 or the A-T buttons change to the other part of the keyboard. A-T have the letters from A to T in alphabetic order. U-9 have the other letters and all the numbers.

CHANGE FUNCTION OF MACHINE INTERLOCK

If the button displays the word "CLOSED" then the control and monitoring unit assumes that the machine it lubricates is shut off when the machine interlock connection is closed and that is running when the connection is open. Otherwise the other way around.

When the machine is shut off the *Control* pauses the timer and don't lubricate, and the *Monitor* also pauses its timers but continue to monitor lubrication passing through the wireless grease meters.

CHANGE NAME

<u>USB</u>

When an USB memory is present in the Control and Monitoring Unit, it records information that can be useful for locating problems or for history.

- is displayed when no USB is connected.
 Push the button before you connect an USB memory.
 is displayed when the Unit is ready to connect to an USB memory.
 Changes when the USB memory is connected.
 is displayed when an USB is connected.
 Push the button before an USB is removed.
 is displayed when the Unit is ready to have the USB removed.
 - Changes when the USB memory is removed.

SELECT LANGUAGE



Click on the button to cycle through:

- GB English
- DE German
- SE Swedish

CHANGE PIN





This menu is for changing the password used to protect the settings from being tampered with.



The CE button clears the pin field.

clear the last number.



CHANGE TIME/DATE



0	16-10	- 0 7	10:2	8 🗵
DATE (YYMMDD): 161	007	
TIME (HHMM):	1	028	
7	8	9	+	
4	5	6	CE	Ŷ
1	2	3	0	

This menu is for setting or changing todays date and time. The form of the date is two digits for year, two digits for month, and two for the day. The form of the time is 24 hour with two digits for hour and two digits for minutes.

move back to previous menu.

The CE button clears the marked field.



clear the last number. set the date and time, and close the menu.

change from setting the date to set the time.

change from setting the time to set the date.

<u>RESET</u>

>>0« RESET

Resets the indicators for recorded maximum and minimum amount for each lubrication point. They are displayed on the statistics menu in the *Monitor*.



The INFO button (on the main menu) leads to info menu.

- 1. The name of the machine
- Information text.
 Shown if the lubrication is machine stopped, if an extra lubrication is running, or if the control unit is in manual mode.
- Lubrication status.
 Show pump time and pause time.
- 4. Pump indication Is green when the pump is running, and black if not running.
- 5. Line indication Is green when line 1 is open, and black if closed.
- Line indication
 Is green when line 2 is open, and black if closed.
- Grease indication
 Is blue when there is grease left, red at low level.
- Pressure Shows the pressure in line 1 and line 2. Line 1 is over line 2.
- Set pressure
 Shows the acknowledgement pressure and maximum rest pressure.
- 10. Button to reach previous menu.
- 11. Alarm indicator and button to reach alarm list. The button is red when there are unacknowledged alarms.
- 12. Button to start extra lubrication.
- 13. Button to reach menu for manual lubrication.
- 14. Button to reach statistics menu.
- 15. Button to reach settings menu.
- 16. Button for main menu.

EXTRA LUBRICATION

EXTRA

Pressing the EXTRA button performs a complete lubrication cycle. The button turns green while the extra lubrication is active.



PUMP P PAUSE PRESSU MAINTA EXTRA MACHIN MAX RE	ER.: PER.: RE IN PRES PAUSE T E ST DE ST PRES	1 S TME LAY S	60 sec 2 min 00 bar 5 sec 10 sec 5 sec 50 bar	
7	8	9	4	Ŷ
4	5	6	CE	Ŷ
1	2	3	0	

Set the **pump period**, **pause period** and **pressure**. The pressure setting is only used if the system has pressure transducers connected. If it uses pressure switches you set desired pressure on the switch.

Maintain press is the extra pressure operating period, must not be 0.

Extra pause time is the time between pressurizations of both lines in the event of extra lubrication.

Machine st delay is the time the lubrication continues before the system stops during machine stop.

Max rest press is the maximum allowed pressure in line 2 when the lubrication of line 1 start (or the maximum pressure allowed in line 1 when the lubrication of line 2 start.)

move back to previous menu without saving any changes.

The CE button clears the marked field.

clear the last number.

set all the values and close the menu.

change which value is being edited. Moves the marking to the one below.

change which value is being edited. Moves the marking to the one above.

STATISTICS



The number of lubrications is displayed on this screen.

The top row displays the total number of lubrications since the Control Unit has been in operation.

The lower row displays the number of lubrications since the last reset. To reset the number of lubrications, press:



Both lines can be pressurized manually on this screen to facilitate troubleshooting etc.

Start the manual operation by pressing **START** that becomes green (**START**).

Press the button 🔟 to pressurize the line., the button changes to 💶.

Press the button again to release the pressure.

The pump starts once a line has been pressurized. The pump stops when the set pressure has been reached and the pressure is maintained. If the pressure should drop the pump is started again.

Conclude manual operations by pressing stop button.



When an alarm event occurs, the system shuts down and the screen flashes red. Touching the screen displays the alarm list menu.

The Alarm list displays both the alarms from the *Monitor* and the *Control*. The ones from the *Monitor* have a small "w" before the number of the lubrication point. For the alarms from the *Control*, the number is just a running number series.

Alarm events are listed on this menu.

Low level Pump time 1	The level is low in the drum of lubricant. There's been no pressure acknowledgement for line 1 during the pump period.
Pump time 2	There's been no pressure acknowledgement for line 2 during the pump period.
Press sensor 1	The pressure transducer measures abnormal pressure in line 1, indicating broken pressure sensor or a short circuit in the cables.
Press sensor 2	The pressure transducer measures abnormal pressure in line 2, indicating broken pressure sensor or a short circuit in the cables.
Wrong line	Pressure acknowledgement from wrong line, indicating that the pressure transducers connected to the wrong line.
Hi rest pres 1	Too high remaining pressure in line 1 when the lubrication of line 2 started.
Hi rest pres 2	Too high remaining pressure in line 2 when the lubrication of line 1 started.

🗙 move back to previous menu.

The CE button erases the marked alarm.

☑ acknowledge marked alarm.

moves the marking to the one below.

moves the marking to the one above.

14. HANDLING LUBRICATION MONITOR

To change from *Control* to *Monitor*, click the **I** in the *Control* main menu.

MAIN MENU	Statistic	s Tren	d Set	tings Ala	rm list	Start/stop
		N I TOR ubeMon	16-0 11	9-13 :07	STOP	
0	habiti	\sim	\$	(())	~~	Configuration
	1	2	3	4	5	
	6	7.	8	9	10	
	11	12	13	14	15	Info about the individual lubrication points
	16	17	18	19	20	
						-

Start the lubrication monitoring by clicking **START**. The button changes to **monitoring goes active**.

Lubrication point status:

The number indicates the lubrication points number.



Lubrication is within acceptable parameters.



Unacknowledged alarm.



Acknowledged alarm. Latest measurement not within acceptable parameters.



The lubrication point is temporarily halted because Machine interlock. In this version all or no lubrication point is Machine interlocked.



The lubrication point isn't installed. The setting ENABLE = 0.



The lubrication point is installed but have the lubrication set to 0. The amount of lubrication is monitored, and an alarm will trigger if there is lubrication.



If there are unacknowledged alarms the button is red, otherwise grey.



Replace battery in wireless grease meter. Colour follow above system.

INFORMATION

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20

#1 PUMP 31	9	X
NOW 10.	1 cm ³ /	2.5 min
LAST 49.	7 cm ³ / 1	0.0 min
SET 100.	0 cm ³ / 1	0.0 min
THIS WEEK LAST WEEK	404.0 0.0	cm ³ II.III cm ³
SUBTOTAL Total	32567.3	cm ³
TEMPERATURI BATTERY	E -10 3.7	v°c 《《
		\gg

Information about the chosen lubrication point.

Description:

NOW: 72.8 cm³/ 9.5 min

The first number is how much lubrication that has gone through the meter during the current interval and the second number is how much time has passed since it started.

LAST: 74.9 cm³/ 10.0 min

The first number is how much lubrication went through the meter during the latest interval and the second number is how long that interval was.

SET: 75.0 cm³/ 10.0 min

The first number is the current lubrication amount and the second number is the current interval time.

THIS WEEK: 795.2 cm³

The total amount lubrication that has gone through the wireless grease meter the last seven days.

LAST WEEK: 0.0 cm³

The total amount lubrication that has gone through the wireless grease meter the seven days just before the last seven days.

SUBTOTAL: 795.2 cm³

The total amount lubrication that has gone through the wireless grease meter since latest reset of the resettable counter. The reset is among the settings.

TOTAL: 795.2 cm³

The total amount lubrication that has gone through the wireless grease meter.

TEMPERATURE: 19 °C

The temperature of the wireless grease meter.

BATTERY:

The voltage of the battery in the wireless grease meter.



Move back to previous menu.

Statistical overview.

Trend for chosen lubrication point.

To change show information of other lubrication point.

3.7 V

SETTINGS

	#1 POS1	T.	81 X 19 3	1	X	#1 POS	51	2 March		X
*	ENABLE (Volume Interval	1/0) CM ³ MIN	10.0 5.0		\gg	MAX TEN Calf CN Subtot	1P °C 1 ³ / PLS CM ³	70.0 0.325 923.3		\gg
	MAX VOL MIN VOL	CM ³ CM ³	20.0	CE	0	ID SER. #		0	CE	0
	7	8	9	+	Ŷ	7	8	9	t	Ŷ
	4	5	6		Ŷ	4	5	6	•	Ŷ
	1	2	3	0	H	1 .	2	3	0	H

Each lubrication point has its own settings. Go down to ID to name lubrication point.

ENABLE (1/0)

1 If the lubrication point should be monitored or not. 1 =on and 0 =off.

VOLUME CM³ 10.0

The amount that the lubrication point is supposed to get during the monitoring interval. If set at 0, the lubrication point will only be monitored for any lubrication.

INTERVAL MIN 5.0

The monitoring interval in minutes. Should be several times the lubrication cycle for stability, but the need for fast reaction may force a shorter time.

CM³ MAX VOL 20.0 CM3 5.0 MIN VOL

High and low limit for what is allowed amounts. As soon as the amount is over the high limit an alarm is triggered. The low limit is checked once a complete monitoring interval is complete.

MAX TEMP °C 70.0

When the wireless grease meter records a higher temperature, it will trigger an alarm. If the wireless grease meter is exposed to too high temperatures it may be damaged.

CALF CM³/PLS 0.325

The calibration factor for the wireless grease meter. Should not be altered.

SUBTOT CM³ 923.3

Reset the subtotal by setting this to zero.

Move back to previous menu.

CE-button clears the marked field.

- Erases the last digit. -
- Saves changes and returns to previous menu.
- J Move marked field down one row.
- Move marked field up one row. ⇮

Change selected lubrication point up or down and reset changes.

followed by **START** to apply new settings instantly. Otherwise they apply from Press next monitoring interval.

STATISTICS







The statistics view gives an easy overview of the lubrication points.

- Status.
 - Green OK.

Blue Machine interlocked.

- Yellow Latest amount not within allowed parameters. Acknowledged alarm.
- Red Unacknowledged alarm.
- Lowest and highest amount since last reset.

The reset is located by pressing 💟 (to get to the *Monitor* main menu), then press

- The amount of the latest completed monitoring interval.
 The bar is scaled according to the upper and lower allowed limit. Unless the upper and lower limit is the same for different bars one shouldn't compare them.
- Move back to previous menu.

<u>TREND</u>





The latest amounts scaled by the upper and lower allowed limit. Older amounts to the left and newer to the right.

Move back to the previous menu. Change to the previous or next lubrication point.

EU DECLARATION OF CONFORMITY

We, Assalub AB, Prästängsvägen 15, SE-597 30 Åtvidaberg, Sweden, declare that the

CONTROL AND MONITORING UNIT CC1/CCWMon 20

Art. Nr. 102061

is designed and manufactured in accordance with

EUROPEAN EMC DIRECTIVE 2014/30/EU and EUROPEAN LVD DIRECTIVE 2014/35/EU

as outlined in the harmonized Norms

EN 61000-6-4:2007, A1:2011 EN 61000-3-2:2014, EN 61000-3-3:2013 EN 61000-6-2:2005, EN 61000-4-2, -3, -4, -5, -6, -11 IEC 61010-1 (Third Edition) :2010

Åtvidaberg, March 2, 2018

for fails

Kim Funck Managing Director

Niklas Rehn Manager Product Development and Quality



ASSALUB AB

Box 240 597 26 Åtvidaberg SWEDEN

Phone:	+46 (0)120-358 40
Fax	+46 (0)120-152 11
E-mail:	info@assalub.se
Internet:	www.assalub.se